

# BARCODE Scanner & RFIID Reader



[www.budgie-scan.com](http://www.budgie-scan.com)

*MISE SOUS & HORS TENSION  
SWITCHING ON & OFF*

# Budgie®

## *User and programming manual-L1*

Manuel utilisateur et de programmation-L1

Rev. 1.2 / Juin 2011

Reference : **91A-BUDGIE-200711-b**

**MISE SOUS & HORS TENSION  
SWITCHING ON & OFF**



**MISE SOUS et HORS TENSION PAR APPUI / SWITCHING ON and OFF BY PRESSING :**



Le BUDGIE® se met en route en maintenant le doigt positionné sur la zone de déclenchement de lecture durant **2 secondes (valeur par défaut)**. Les 3 LEDs s'allument simultanément indiquant que le BUDGIE® est sous tension. Relâcher la zone de déclenchement.

*The BUDGIE® is switched on by pressing for **2 seconds (default value)** the triggering area. The 3 LED light on simultaneously indicating that the BUDGIE® is on. Release finger from the triggering area.*

 
**MISE SOUS TENSION  
POWER ON**

**MISE HORS TENSION  
POWER OFF**

**MISE SOUS TENSION PAR APPUI  
POWER ON BY PRESSING**

**PAS DE MISE HORS TENSION  
PAR APPUI\*  
NO POWER OFF BY PRESSING\***

APRES 1 seconde  
*1 second TIME OUT*



APRES 4 secondes  
*4 seconds TIME OUT*



APRES 2 secondes\*  
*2 seconds TIME OUT\**



APRES 6 secondes  
*6 seconds TIME OUT*



APRES 3 secondes  
*3 seconds TIME OUT*



APRES 8 secondes  
*8 seconds TIME OUT*



APRES 4 secondes  
*4 seconds TIME OUT*



APRES 10 secondes  
*10 seconds TIME OUT*



APRES 5 secondes  
*5 seconds TIME OUT*



APRES 12 secondes  
*12 seconds TIME OUT*



APRES 6 secondes  
*6 seconds TIME OUT*





## MISE EN VEILLE AUTOMATIQUE / AUTO POWER OFF :

Le BUDGIE® s'éteint au-delà d'un certain temps d'inutilisation. Ce temps est configurable.  
*The BUDGIE® auto switch off after a configurable time out.*

PAS DE MISE EN VEILLE  
AUTOMATIQUE  
*NO AUTO POWER OFF*



ARRET APRES 30mn  
*30 minutes TIME OUT*



ARRET APRES 90mn  
*90 minutes TIME OUT*



ARRET APRES 180mn  
*180 minutes TIME OUT*



ARRET APRES 10mn  
*10 minutes TIME OUT*



ARRET APRES 60mn  
*60 minutes TIME OUT*



ARRET APRES 120mn\*  
*120 minutes TIME OUT\**



## MISE HORS TENSION PAR CODE A BARRES / POWER OFF BY BARCODE :

Le BUDGIE® s'éteint en lisant ce code à barres..  
*The BUDGIE® switch off by read this barcode.*

MISE EN VEILLE  
*POWER OFF*





Ce document est sujet à évoluer. Nous vous invitons à visiter le site officiel du BUDGIE afin de vous mettre à jour avec les derniers documents de configuration et logiciels fonctionnels.

*This documentation is subject to change. We invite you to visit frequently the official BUDGIE® website so as to be get the last configuration documents and running softwares.*

**[www.Budgie-scan.com](http://www.Budgie-scan.com)**

Documentation et outils téléchargeables via [www.budgie-scan.com](http://www.budgie-scan.com)

*Downloadable documentations and tools with [www.budgie-scan.com](http://www.budgie-scan.com)*

- The User and Programming manual L1 (ref : 91A-BUDGIE-200711-b)
- The BLUEGEN® which allows to simply create and print pairing codes for the BUDGIE®
- COM2KEY® a software to redirect SPP or COM to KEYBOARD buffer

